



Cryogenic Plastics Inc.

P.O. Box 2040 * 1098 Windy Hill Rd.

Kyle, TX 78640

Ph: 512-295-2683 Fax: 512-295-2245 Web Site:

www.cpitx.com E-Mail: info@cpitx.com

Collar Inflation Instructions

1. Start at the center chamber of one side and inflate until chamber take shape (about 1/2 psi)
2. Inflate chambers in front and in back of center chamber until they take shape.
3. Follow steps 1 and 2 on opposite side of Rib
4. Inflate nose chamber until it take shape (about 1/2 psi)
5. Go in same order filling chambers in 1/2 psi increments until all chambers are filled.

**** OPERATING PRESSURE IS 2.0 PSI TO 2.5 PSI ****

**** CHECK PRESSURE DAILY ****

**** CAUTION ** DO NOT INFLATE OVER 3 PSI ** PRESSURE RELIEF VALVE SET AT 2.5 PSI**

**** PRESSURE WILL INCREASE AS **
TEMPERATURE INCREASES AND
IF COLLAR IS IN DIRECT SUN.**

**** INSPECT AND CLEAN PRESSURE RELIEF VALVES MONTHLY ****